


Continuum Install Instructions



Continuum Install Parts List


M19 Bracket

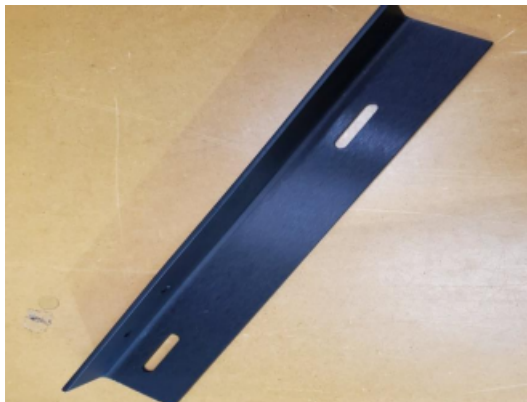

I19 Bracket



Y24 Bracket

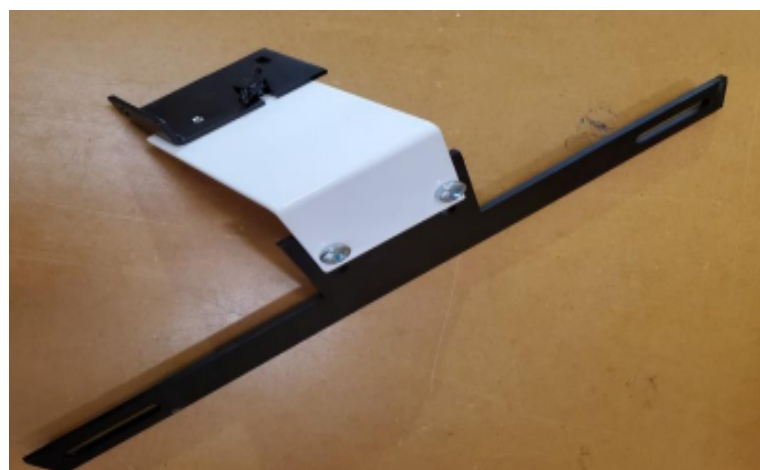


X15 Bracket

X Axis Cable



Y Axis Cable

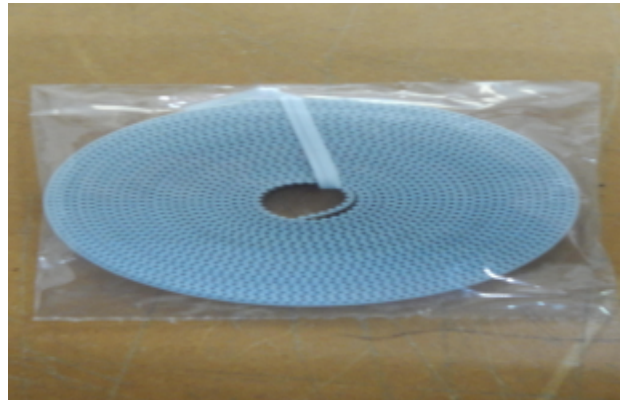


Power Cable



Direct
Connect
Cable



Continuum Install Instructions

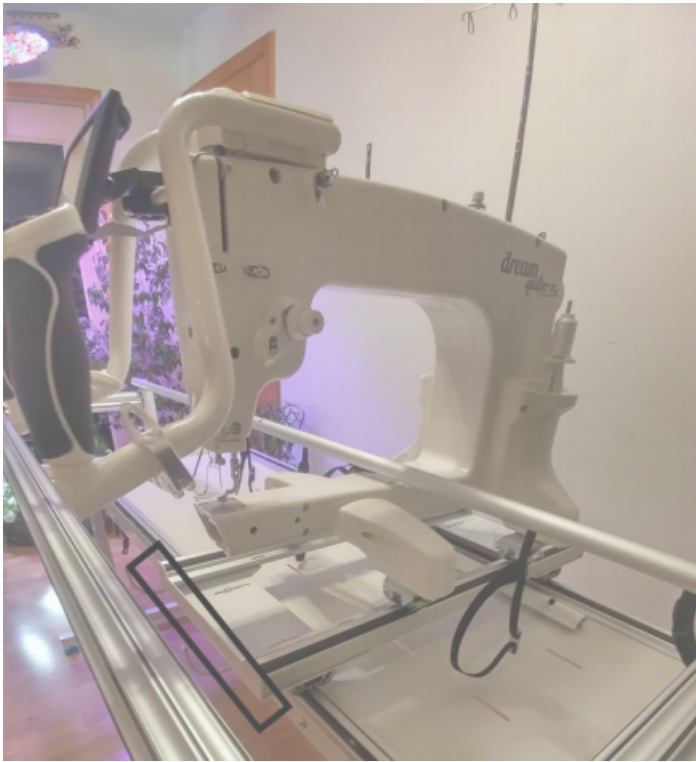


Attach the motor mounting bracket (M19) using the 2 M6X10mm screws going through the two slots in the bracket and the two holes in the front of the carriage with the bracket making an L shape inwards. These bolts are secured with M6 KLocks on the inside of the carriage. (Shown below)



Continuum Install Instructions




The Idler bracket (I19) is attached to the frame the same way as the motor bracket but with the L shape facing inwards.

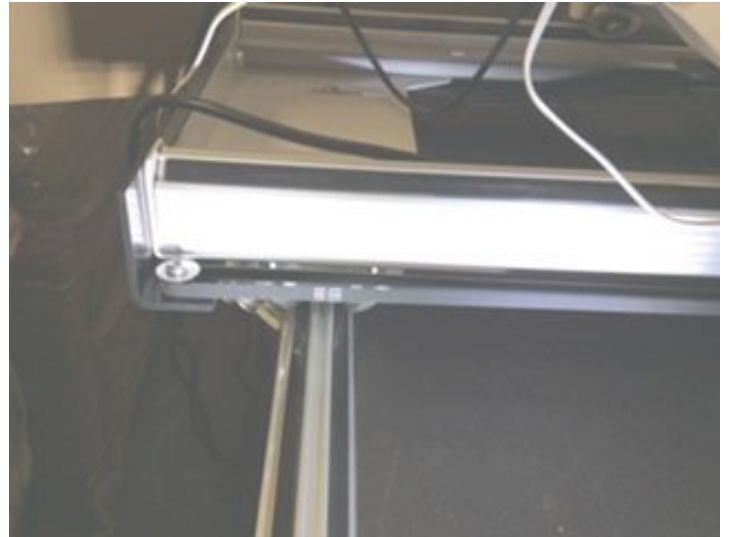

The Y-Axis belt bracket (Y24) is attached in between the axil and machine on the left side of your machine.




Continuum Install Instructions

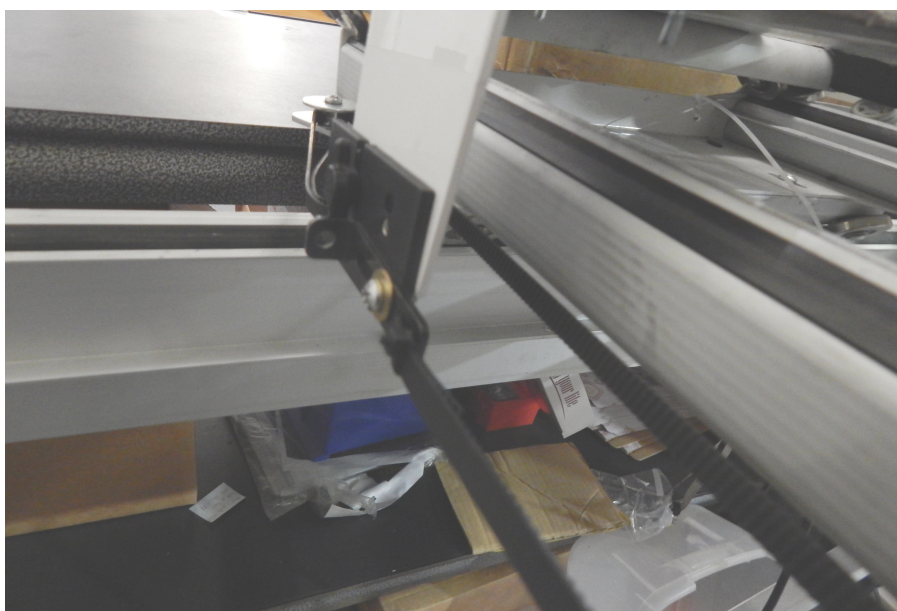

Pic is not of the frame just a idea of how it should go

Continuum Install Instructions

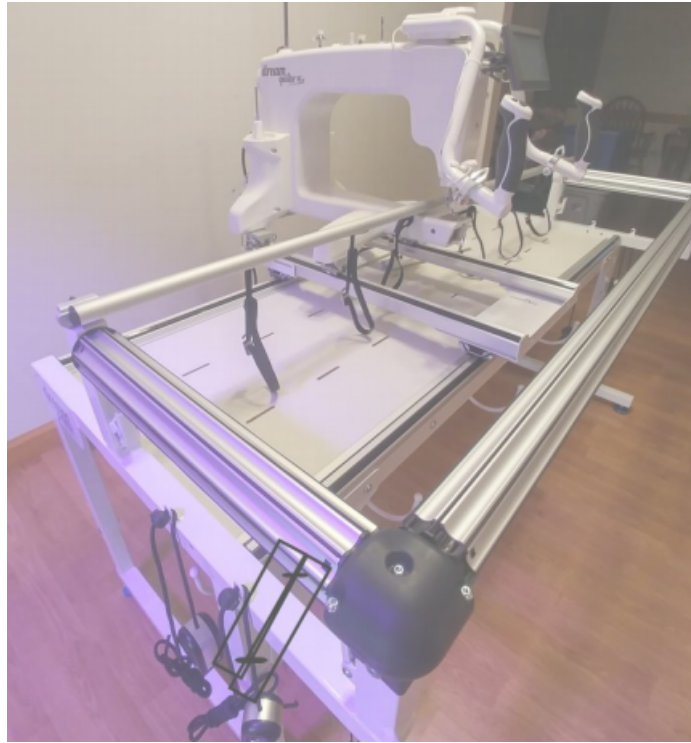

The X-Axis belt bracket (X15) is sandwiched onto the arm of your frame using the 10-24X2-1/4" screws and 10-24 KLocks. The eyebolt is then attached to the bracket with 2 10-24 KLocks. (shown below)



Continuum Install Instructions



Shown above is the display bracket for your Q'Nique. It is attached under you handlebars. You will need to remove your handlebars, mount the display bracket, and then re-install your handlebars. (Shown below)



Continuum Install Instructions

